
## FIT OFF GUIDE - SOCKET OUTLETS

Installation Couplers when connected to PM series twin or quad socket outlets are required to be fully engaged with the locking clips latched.

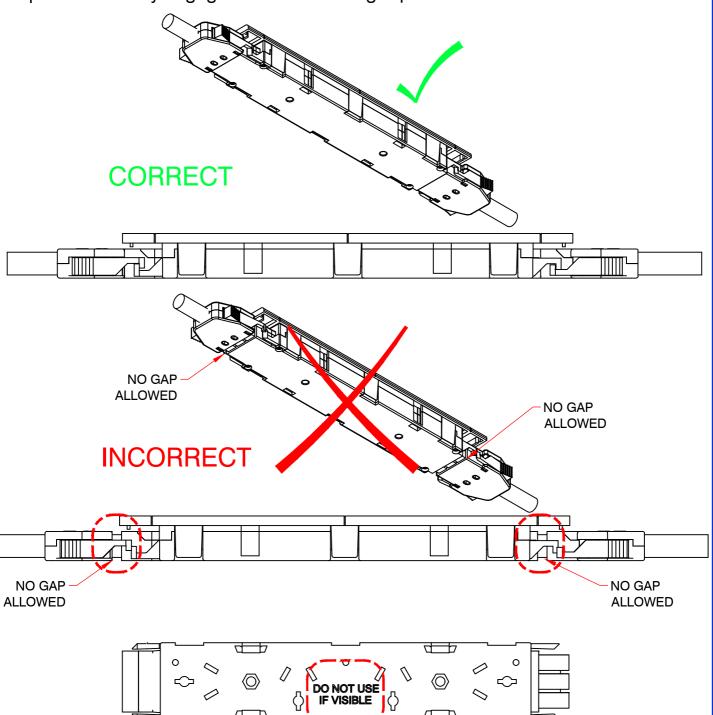

IF THE MARKING 'DO NOT USE IF VISIBLE' CAN BE SEEN, THE OUTLET DOES NOT HAVE THE FRONT FASCIA FIXED INTO POSITION AND THEREFORE MUST NOT BE USED. ATTACH THE FRONT FASCIA TO COMPLETE THE INSTALLATION



**Electric Cable Duct Systems Pty. Ltd.** 


Ph: 1300 123 ECD (323) Fax: (03) 9899 5042

Email: info@ecd.net.au www.ecd.net.au ABN 80005544103

## FIT OFF GUIDE - INSTALLATION COUPLERS

Installation Couplers are required to be:

Fully engaged when connected with the locking clips latched.

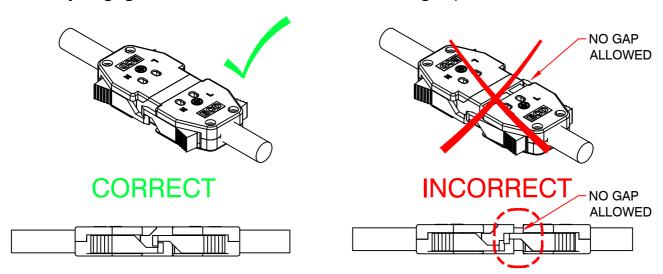

- Installed so the sum of the loads on all outlets does not overload the starter socket (input coupler) and cable.
- Installed with loads to be distributed as evenly possible between outlets.
- Installed to prevent excessive strain on installation couplers or cable. If unsure, support or fix installation couplers and cable.
- Installed and tested in accordance with AS/NZ 3000 (Australian and New Zealand Wiring Rules).

## Note:

- Use of installation coupler systems are not replacements for plug and socket outlet systems complying with AS/NZS 3112, AS/NZS 3123 or AS/NZS 60320.1.
- 2. Interchangeability with other installation coupler systems is not ensured and although no dangerous compatibility issues are anticipated mixed system installations are not advised
- 3. The installation coupler is for use in readily accessible areas
- 4. Installation coupler systems are intended for connection and disconnection without load
- 5. test plugs are supplied with each installation. Additional test plugs are available on request. Please contact our sales team



**Electric Cable Duct Systems Pty. Ltd.** 

Ph: 1300 123 ECD (323) Fax: (03) 9899 5042

Email: info@ecd.net.au www.ecd.net.au ABN 80005544105